



RANGE OF STARTING ANGLES
AT ZERO LOAD:
10° UP FROM HORIZONTAL
45° DOWN FROM HORIZONTAL

9 DIFFERENT SETTINGS

NOTE: WE STRONGLY RECOMMEND THE
NORMAL 24° DOWN STARTING ANGLE
EXCEPTING SPECIAL CIRCUMSTANCE.